

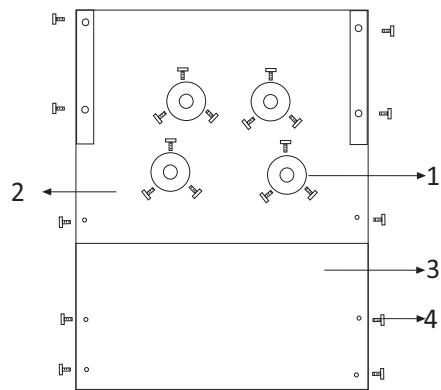


Despiece - Diagram

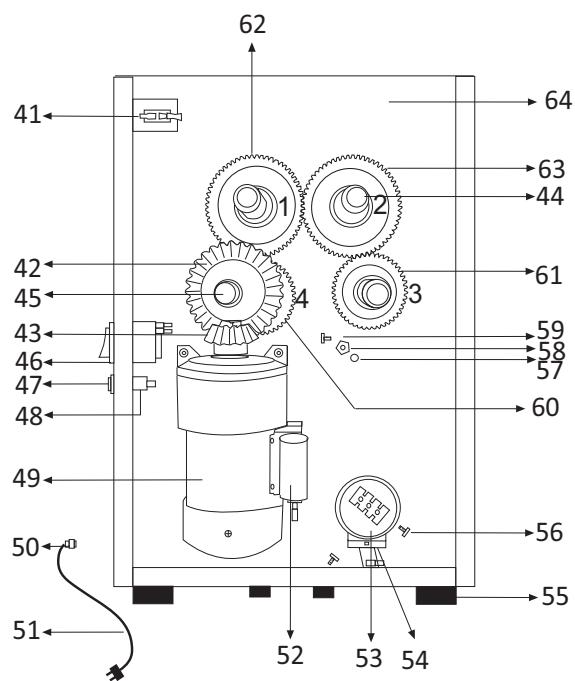

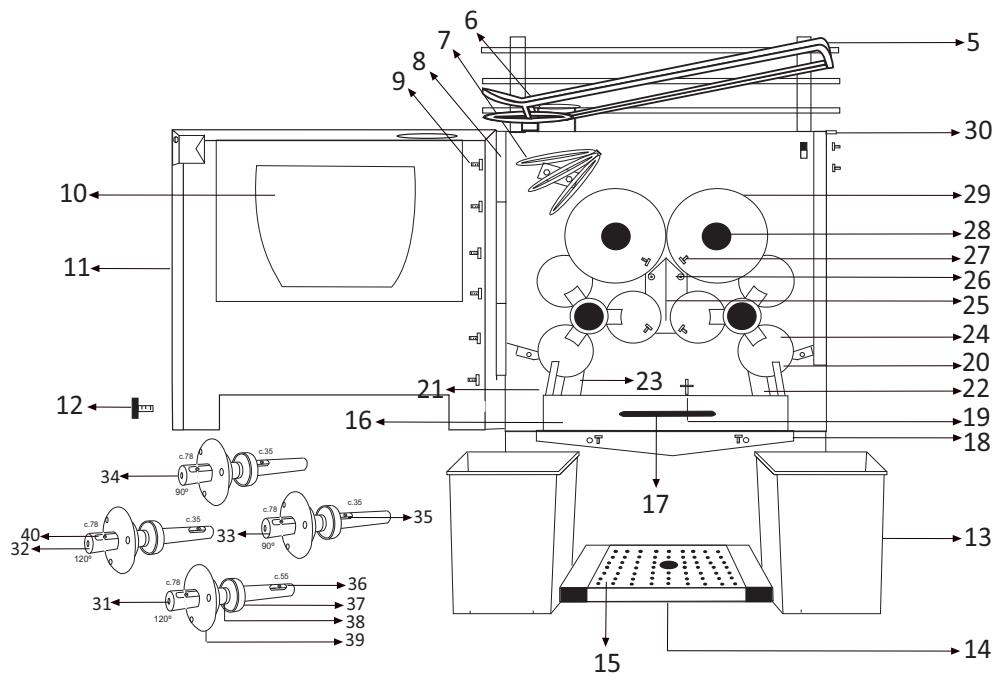

REPUESTOS EXPRIMIDORA
ORANGE JUICER SPARE PARTS
FRUCOSOL F-50

Ref.	Nº	Repuesto	Spare Part
f50-001	1	Casquillo negro	Black spacer
f50-002	2	Tapa trasera superior	Top case back
f50-003	3	Tapa trasera inferior	Under case back
f50-004	4	Tornillo M5*10	Screw M5*10
f50-005	5	Cesta de almacenaje 4 kg	Storage basket 4 kg
f50-005g		Cesta de almacenaje 10 kg	Storage basket 10 kg
f50-006	6	Rampa C	Ramp C
f50-007	7	Rampa B	Ramp B
f50-008	8	Bisagra	Hinge
f50-009	9	Tornillo M4*10	Screw M4*10
f50-010	10	Cristal puerta	Door glass
f50-011	11	Carcasa frontal	Front cover
f50-011X		Carcasa frontal X	Front cover X
f50-011X1		Orejeta X	Lug X
f50-012	12	Tornillo negro	Black screw
f50-013	13	Cubo de plástico	Plastic cube
f50-013i		Cubo de inox	Inox cube
f50-014	14	Bandeja posavasos	Tray for glasses
f50-015	15	Rejilla posavasos	Grating for glasses
f50-016	16	Filtro	Filter
f50-017	17	Tirador del filtro	Filter shooter
f50-018	18	Embudo de filtración	Filter funnel
f50-019	19	Pitón M4	Bottom M4
f50-020	20	Quitacáscaras D	Peel extractor R
f50-021	21	Quitacáscaras I	Peel extractor L
f50-022	22	Soporte quitacáscaras D	Support extractor R
f50-023	23	Soporte quitacáscaras I	Support extractor I
f50-024	24	Bola	Squeezer ball
f50-025	25	Soporte cuchilla	Support cutting blade
f50-026	26	Cuchilla	Cutting blade
f50-027	27	Tornillo M5*10	Screw M5*10
f50-028	28	Tornillo amarillo	Yellow screw
f50-029	29	Hueco	Hollow item
f50-030	30	Soporte carcasa	Support front cover
f50-031	31	Eje exprimidor 4	Squeezer shaft 4
f50-031X		Eje exprimidor 4 X	Squeezer shaft 4 X
f50-032	32	Eje exprimidor 3	Squeezer shaft 3
f50-032X		Eje exprimidor 3 X	Squeezer shaft 3 X
f50-033	33	Eje exprimidor 1	Squeezer shaft 1
f50-033X		Eje exprimidor 1X	Squeezer shaft 1X
f50-034	34	Eje exprimidor 2	Squeezer shaft 2
f50-034X		Eje exprimidor 2X	Squeezer shaft 2X
f50-035	35	Chaveta 35'	Peg 35'
f50-036	36	Chaveta 55'	Peg 55'
f50-036t		Tornillo chaveta	Screw of key
f50-037	37	Cojinete	Bearing of squeezer shaft

Ref.	Nº	Repuesto	Spare Part
f50-038	38	Goma tórica	O-ring seal
f50-039	39	Casquillo amarillo	Yellow spacer
f50-040	40	Chaveta 78'	Peg 78'
f50-041	41	Interruptor de seguridad	Security switch
f50-042	42	Engranaje cónico 29	Conical gear 29
f50-042a		Anclaje interruptor seguridad	Security button anchorage
f50-043	43	Engranaje cónico 14	Conical gear 14
f50-044	44	Separador largo	Separator large
f50-045	45	Separador corto	Separator short
f50-046	46	Interruptor	Switch
f50-047	47	Potafusible	Fuse holder
f50-048	48	Fusible	Fuse
f50-049	49	Motor	Motor
f50-049X		Motor X	Motor X
f50-049X2		Transformador X	Transformer X
f50-049X3		Rectificador del transformador X	Black screw
f50-049X4		Escobilla de carbón X	Carbon brush
f50-049X5		Engranaje de hierro X	Iron gear
f50-049X6		Engranaje hierro externo X	Cooper gear
f50-049X7		Engranaje cobre X	Cooper gear X
f50-049X8		Engranaje salida 14X	Output gear 14X
f50-049X9		Pasador X	Pin X
f50-049X10		Cojinete eje X	Shaft bearing X
f50-049X11		Disyuntor X	Breaker X
f50-049X12		Eje salida X	Output shaft X
f50-049X13		Casquillo motor X	Motor spacer X
f50-049X14		Casquillo cobre X (eje)	Cooper spacer X (shaft)
f50-049X15		Grupilla X	Circlip X
f50-049X16		Chaveta engranaje hierro x	Key of the iron shaft X
f50-050	50	Cubierta cable de red	Network cable cover
f50-051	51	Cable de red	Network cable
f50-052	52	Condensador del motor	Motor capacitor
f50-053	53	Caja de conexiones	Junction box
f50-054	54	Soporte caja de conexiones	Support junction box
f50-055	55	Pata	Leg
f50-056	56	Tornillo M5*10	Screw M5*10
f50-057	57	Arandela M8	Washer M8
f50-058	58	Tuerca M8	Nut M8
f50-059	59	Tornillo M8*25	Screw M8*25
f50-060	60	Engranaje dentado 45-4	Tooth gearing 45
f50-061	61	Engranaje dentado 45-3	Tooth gearing 45-3
f50-062	62	Engranaje dentado 60-1	Tooth gearing 60-1
f50-063	63	Engranaje dentado 60-2	Tooth gearing 60-2
f50-064	64	Cuerpo máquina	Machine's body